

SIMPLIFIED INSTRUCTIONS

GLOBAL ACCESS RADIOKEYD+ WIRELESS KEYPAD



ATTENTION:

This manual is only for the installation of a factory configured keypad (default MONOCODE)

A) SIMPLIFIED PROGRAMMING (IN 3 STEPS):

STEP 1 - ADDING AN ACCESS CODE

a) Entering into programming mode:



b) Enter a new access code:



To not forget new access codes, record them here:

STEP 2 - RECEIVER ASSOCIATION (GLOBAL ACCESS 2-CHANNEL MINI RECEIVER)

Put the receiver in programming mode (refer to Global Access 2-Channel Mini receiver manual)

Type the access code previously recorded in Step 1 b) on the keypad

Followed by the [*] key to associate Channel 1 OR by the [#] key to associate Channel 2

STEP 3 - MASTER CODE MODIFICATION (HIGHLY RECOMMENDED)

a) Enter into programming mode:



b) Enter the new master code:



To not forget new master code, record it here:

--

B) ADDITIONAL SETTINGS:

STEP 1 - DELETING AN ACCESS CODE

a) Entering into programming mode:



b) Deleting codes:



STEP 2 - RESET TO FACTORY SETTINGS*

a) Entering into programming mode:



b) Reset:




CAUTION:



Resetting to factory settings will erase all codes except the master code!

*** FACTORY SETTINGS:**

- Operating Mode: MONOCODE
- Buzzer: ON
- Backlight: ON
- Default Master Code: 1234
- Access Code Memory: CLEAR

C) TO GO FURTHER:

 = key that sends a unique fixed code to be used for a doorbell or light for example.

Please note that if you use the  button, you must also perform the association procedure to the receiver by pressing the  button instead of entering an access code in Step b) of the association.