

IMPORTANT NOTES:

- The SIM fitted to the 4G trigger module **MUST** be **ACTIVATED** and be **IN CREDIT!**
- Call Waiting/Message Bank should be deactivated if they are a feature of your 4G Trigger Device's SIM
- Step 1 **MUST** be repeated if the SIM is ever replaced

STEP 1 - REGISTERING THE NUMBER OF THE SIM INSTALLED

1. The small button inside the 4G device, next to the SIM card slot must be turned on before powering the device up.
2. Create a new message on your mobile to send to the SIM installed in the device as follows;

TO: MESSAGE: 1234TEL #

SEND YOUR MESSAGE TO THE TRIGGER DEVICE

NOTE: If the message has been received correctly, a reply **Set Success!** message will be sent to you.

STEP 2 - ADDING ADDITIONAL USERS

1. Create a new message on your mobile to send to the SIM installed in the device as follows;

TO: MESSAGE: 1234A1 #

SEND YOUR MESSAGE TO THE TRIGGER DEVICE

2. For each additional USER, the SLOT number **MUST** be increased by 1 digit, eg: 101, 102, 103 etc

STEP 3 - TURN OFF SMS RESPONSES (TO AVOID MESSAGE CHARGES ON THE DEVICE SIM)

1. Create 2 new messages on your mobile to send to the SIM installed in the device as follows;

TO: MESSAGE: 1234GOFF##

SEND YOUR MESSAGE TO THE TRIGGER DEVICE

NOTE: If the message has been received correctly, a reply **Relay OFF will not return SMS** message will be sent to you.

TO: MESSAGE: 1234GON##

SEND YOUR MESSAGE TO THE TRIGGER DEVICE

NOTE: If the message has been received correctly, a reply **Relay ON will not return SMS** message will be sent to you.

IMPORTANT: **BOTH** Messages **MUST** be sent to deactivate the SMS responses!

STEP 4 - REMOVING A USER

1. Create a new message on your mobile to send to the SIM installed in the device as follows;

TO: MESSAGE: 1234A1 ##

SEND YOUR MESSAGE TO THE TRIGGER DEVICE

2. To add a new user into the removed SLOT, repeat STEP 2.