

Self-contained unit with sensor, transmitter, and antenna

Integrator Relay contact connects to any security/home automation system or gate operator

Auger Screws (2) Holds sensor puck in ground or gate operator

With battery terminal clips Coaxial Cable (optional)

Use this when connecting to included antenna when externalizing it with sealed metal gate operator.

CW-REP REPEATER Turn any additional Integrator into a repeater. Install in window closest to sensor, extending radio range.



strongly advised

ARMAS Compact Photo Beams Wireless/Wired Plastic or Metal Anti Vandal #1059-0050



| Power Supply | Stand-by Current | Alarm Current | Estimated Battery Life | Use Frequency | IP |
|------------------------------|------------------|---------------|---------------------------|--------------------|------|
| 2 x CR123A Batteries (6V) | 22 Microamps | 130 Milliamps | 1-3 Years | Max 350 Cycles/day | IP68 |

Standard Application Example





() 1300 366 046 🖾 sales@global-access.com.au For more information, visit our website! global-access.com.au

